

# Raumer



## HANG FIX

Esempio di Installazione Hang Fix - Example of Installation Hang Fix  
Ejemplo de Instalación Hang Fix - Exemple d'installation Hang Fix



MADE IN ITALY



Hang Fix Ø8 - punta Ø8  
Hang Fix Ø8 - drilling hole Ø8  
Hang Fix Ø8 - punta Ø8  
Hang Fix Ø8 - pointe Ø8

Hang Fix Ø10 - punta Ø10  
Hang Fix Ø10 - drilling hole Ø10  
Hang Fix Ø10 - punta Ø10  
Hang Fix Ø10 - pointe Ø10

Hang Fix Ø12 - punta Ø12  
Hang Fix Ø12 - drilling hole Ø12  
Hang Fix Ø12 - punta Ø12  
Hang Fix Ø12 - pointe Ø12

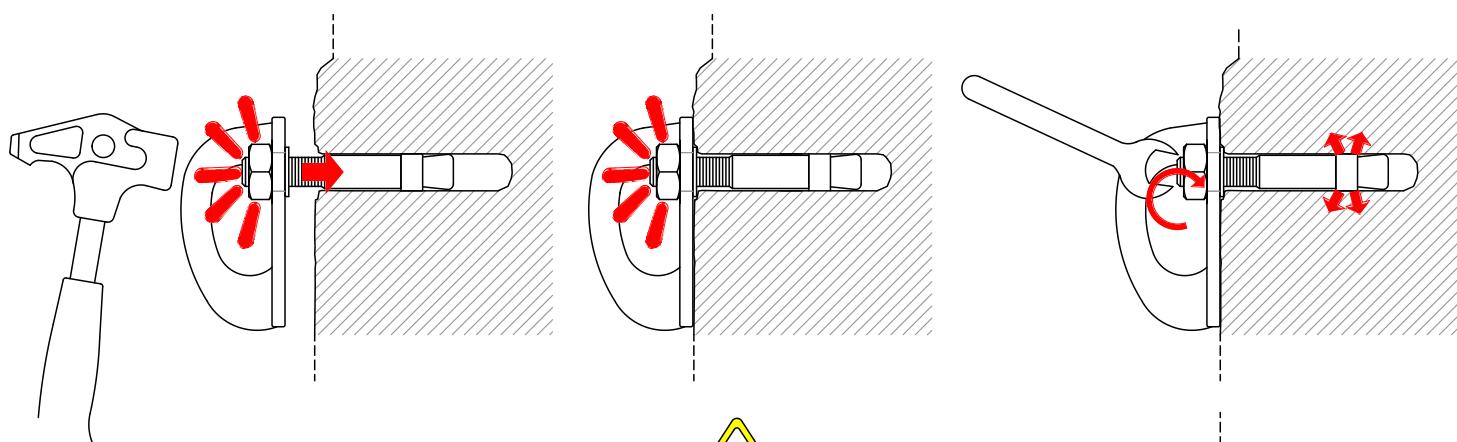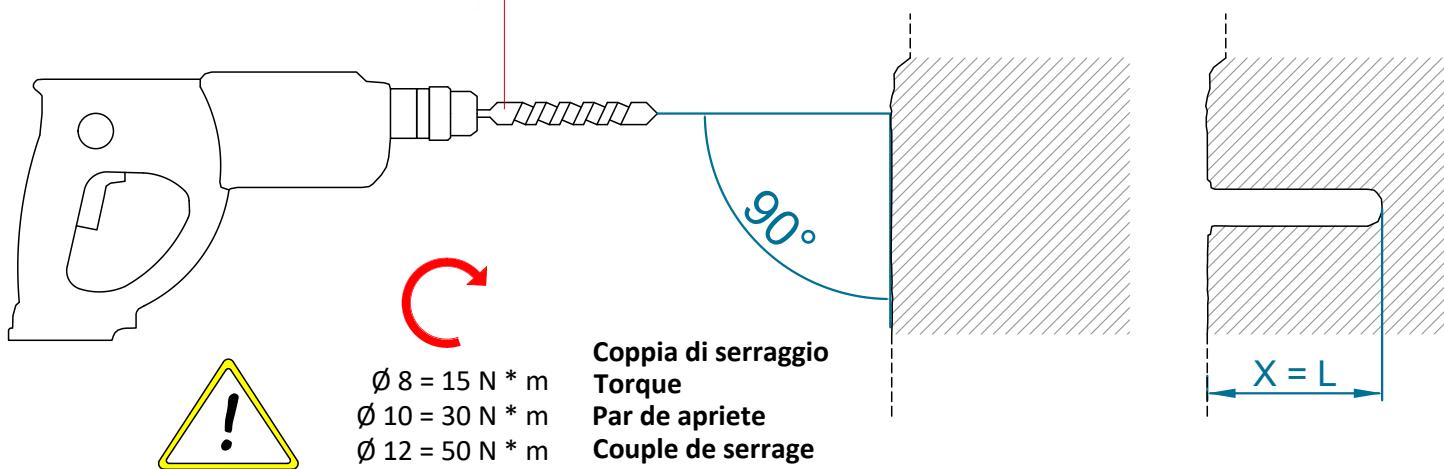

**OK!**

MIN 3 mm  
MAX 6 mm

**OK!**

